



- Remove chips from T-slot of machine before sliding T-nut in.
- Screw MITEE-BITE clamp all the way down, then back off one turn.
- POSITION CAM of large screw as shown in diagram.
- Move clamp in position and tighten set screw.
- Clamp is now ready to use.
- CAUTION! Never assume clamp is tight, ALWAYS tighten clamp prior to machining!

Right

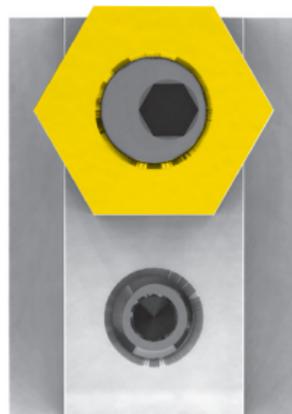

Wrong

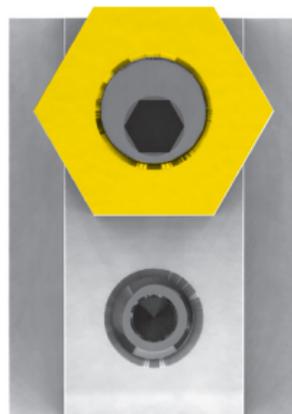

WARNING: This product may contain a chemical known to the State of California to cause cancer or birth defects or other reproductive harm. www.P65Warnings.ca.gov.